

VANTRUE

Sonnet 1 Pro **S1 Pro**

USER MANUAL **V2.3**



vantrue.com

truly driven.



More Info



Facebook@Vantrue



Instagram@Vantrue



ID: @860fnbxk

CONTENTS

01	What's in the box?	1
02	Camera Overview	3
03	Installation	6
04	Basic Operation	16
05	Specifications	41
06	Warning	42
07	Warranty & Support	44

Warm Tips:

1. Please read the user guide carefully before use;
2. The dash camera must always be connected to a power source in order to work;
3. For safe driving, please do not set up products or use your phone to watch driving videos while driving.
4. This product requires an micro SD card to be inserted in order to record video.
5. Please do not disassemble the camera shell or repair it by yourself. If the product malfunctions, please contact VANTRUE official.
6. Please do not install the dash cam in a position that may block your driving vision;
7. Please use the product away from high temperature and humid environment;
8. To continuously improve our customers' experience with our products, we will update the firmware from time to time. If you need, you can update the firmware;
9. Do not install the camera directly in front of the occupants to prevent accidental dislodgement causing a safety hazard;
10. Please note that you may not be able to connect to the Vantrue app when using wireless CarPlay or Android Auto;
11. Please use this product as permitted by law.
12. For App Connection Issues: To ensure a stable connection between your phone and the S1 Pro dash cam's Wi-Fi, please make sure your Vantrue app is updated to the latest version. If you need have any questions or need technical support, feel free to contact us—we're here to help.

 
1. What's in the box?




A. Vantrue S1 PRO Dash Cam



B. GPS Mount



 C. Car Charger with Built-in Type-C Cable (11.5ft)



D. Type-C USB Data Cable (3ft, for data transfer only)



E. Electrostatic Stickers*2



F. Crowbar



G. Dust-free Cloth



H. Warning Stickers*2



I. Adhesive Stickers*2



J. Quick User Guide



K. Cable Clips

Optional Accessories



L. CPL Filter



M. Remote Controller



N. LTE Module



O. Vantrue Hardwire Kit Cable



P. RC08 DMS
Lens



Q. RC08 DMS
Inside Camera
Cable



R. RC04 Rear
Camera



S. RC04 Rear
Camera
Cable



T. RC07 Rear
Camera



U. RC07 Rear
Camera Cable


Note:

S1Pro 1CH: Does not include the rear camera.

S1Pro 2CH: Includes the RC04 rear camera and rear camera cable.


S1Pro DMS: Includes the RC08 In-car DMS Lens and Inside camera cable.

2. Camera Overview

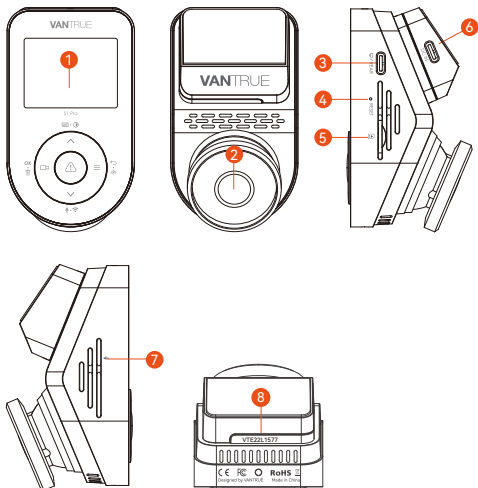

1. 2 inch IPS Screen
2. Front-Facing Camera
3. Type-C USB Port for Rear Camera
4. Reset Button
5. MicroSD Card Slot
6. Type-C USB Port for Charging
7. Microphone
8. Serial Number

Button Instruction

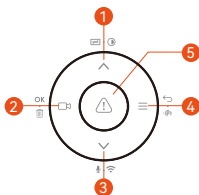

No. Buttons Instruction


1.  In menu settings and file browsing, short press to display the previous option, long press to scroll up to display options; In playback mode, short press to fast forward;
2. 
OK •  During video recording, short press to start/stop recording; In menu settings, short press to confirm the action; In playback mode, short press to play/pause the file;
3. 
 •  During video recording, long press to turn on/off WiFi, and short press to turn on/off the microphone; In menu settings and file browsing, short press to display the next option, and long press to scroll down to display options; In playback mode, short press to pop up the delete file menu;
4. 
 •  In the recording mode, long press to turn on/off parking mode; In menu settings and file browsing, short press to return to the previous interface;
5.  In power-on status, long press to turn off the dash cam; In power-off status, short press to turn on the dash cam;

During video recording, short press to capture a picture; In playback mode, short press to pop up the delete Menu.


LED Indicator

Steady green light In standby status

Blinking green light Camera is recording

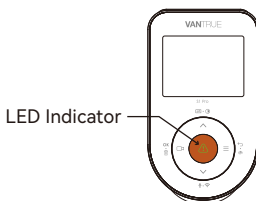


Screen Overview

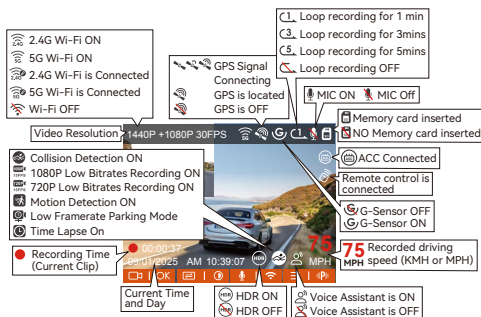





3. Installation

3.1 Installing a Memory Card (Recommend Vantrue U3 high-speed microSD card).

Please insert a memory card (memory card capacity: 32GB-1TB, card speed: U3/Class10/A2, recommend Vantrue U3 microSD card) into the card slot according to the direction indicated in the below picture, until a "click" sound is heard in the card slot, indicating that the memory card is inserted correctly.

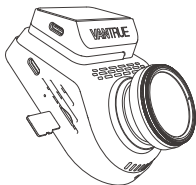

After inserting the memory card, if the screen prompts "Card error, please format", please directly press the ≡ button to enter the menu, then go to 'system setup' and choose 'format' to start the formatting process.

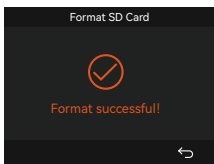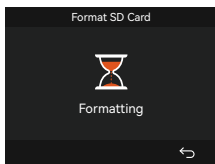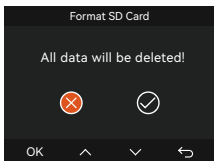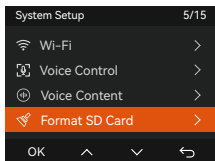


Note:

- The dash cam has specific requirements on the card speed of the memory card. For reliable operation, please use memory card speed: U3/Class10/A2, we recommend using a VANTRUE SD card(sold separately).
- The microSD card should be formatted once a month to maximize the lifetime of the memory card.
- Please do not take the card out when the camera is recording in case the important video file goes missing.

3.2 Installation


3.2.1 Installing the Mount

Align the mount with the dash cam mount interface then push in until the mount is installed.

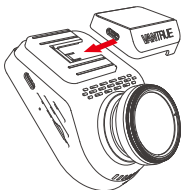


3.2.2 Car Charger Installation

Connect one end of the car charger to the car cigarette lighter and the other end to the Type C port on the front camera mount. Start the ignition, waiting for the dash cam to start.

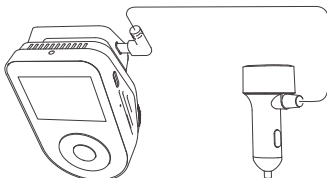


3.2.3 Power On Dash Cam, Select the Installation Position

Before installation, please power on the dash cam and check whether the shooting angle of the front and rear lens is appropriate through the recording view.

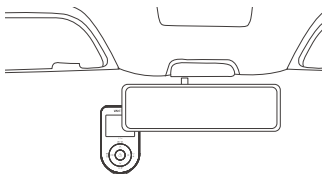


3.2.4 Installing the Electrostatic Stickers

Thoroughly clean the windshield with water or alcohol, then wipe it with a dry cloth. Stick the electrostatic sticker next to the rear-view mirror, which is the recommended position to prevent blocking your view while driving.

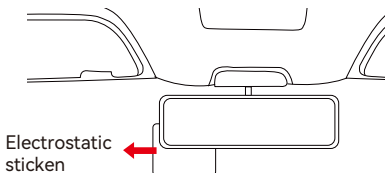


 Note: The electrostatic stickers come with two-sided protective film. Please remove the protective film from No. 1, paste the electrostatic sticker on the windshield, and then remove the protective film from No.2.



3.2.5 Installing the Front Camera

Remove the protective film from the mount, then fix the mount and camera on the electrostatics stickers.

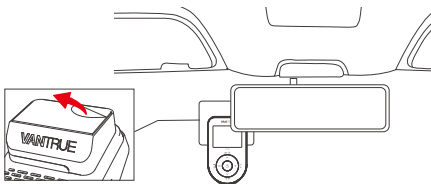

3.2.6 Rear Camera Installation

Please select the installation position on the rear windshield. Remove the protection film of the sticky pad and rear camera lens. Fix the rear camera in the selected position and adjust the angle, then use the rear camera cable to connect the rear camera to the main front camera. (The rear camera can rotate 360°, if the installation is wrong, you can turn on the rotating display on the recording setup to adjust.)



RC04 rear camera installation method (optional)




RC07 rear camera installation method (optional)

3.2.7 Install DMS Camera

Install the RC08 lens as instructed to ensure optimal performance.

For detailed installation instructions, scan the QR code to access the "VANTRUE Intelligent User Manual".

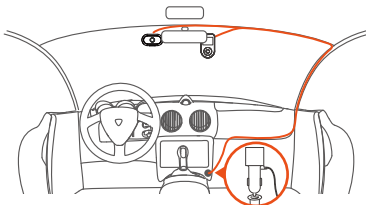


DMS Lens Install & Cabling Diagram




3.2.8 Wire Storage


Car Charger Cable: Use the crowbar to stuff the car charger cable under the rubber seal of the A-pillar and windshield.

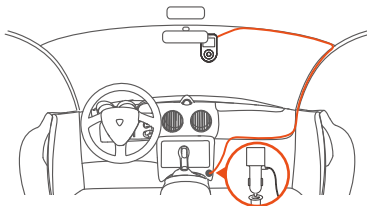

Rear Camera Cable: Carefully store the rear camera cable in the direction shown in the picture.

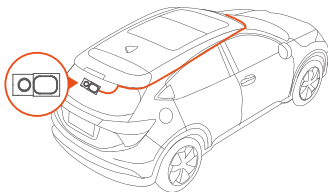

RC04 Rear Camera Cable (optional)

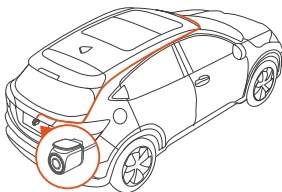

RC07rear camera installation method (optional)

3.3 APP Download

Please scan the QR code for the relevant version below to download the APP and install it.





Note: After this camera is successfully connected to your mobile phone through WiFi, it can perform real-time video preview, change camera settings, download files without internet connection, and play back videos on the mobile phone. However, the GPS track playback and video sharing functions will depend on the internet or telecom value-added services (requires you to turn off/disconnect the camera WiFi) on the internet or telecom value-added services (requires you to turn off/disconnect the camera WiFi).

3.4 WiFi Connection

The WiFi will be turned on automatically when the S1 PRO dash cam is turned on. If the WiFi is turned off, you can reopen the WiFi through shortcut keys, voice control, or menus.


After turning on the WiFi function of the camera, please click "+" to find "S1 PRO" in the "Sonnet Series" through Vantrue APP, choose the right dash cam to connect, then the APP will automatically connect to the camera, and display the current real-time recording situation of the camera.

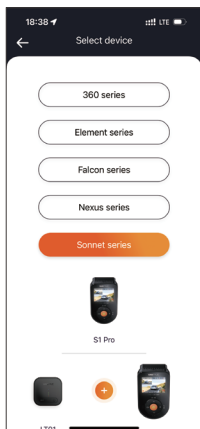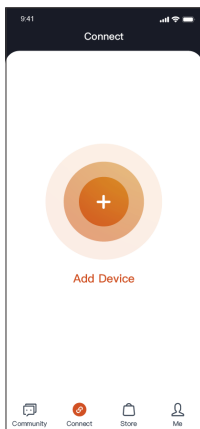

Note:

- Before connecting to WiFi, please make sure the WiFi function of your smartphone is enabled.
- The initial password for this device is only used for initial login. In order to prevent potential security risks, please be sure to change the initial password after the initial login to prevent others from logging into your device without authorization or other adverse consequences.
- If you forget the WiFi password, you can restore the default setting of the device, and the Wi-Fi password of the device will also be restored to the default password(12345678).

3.5 APP Operation

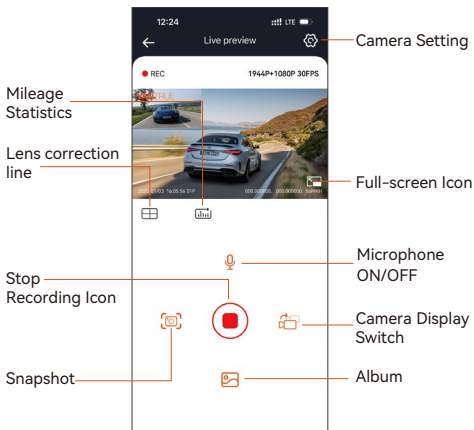


After the APP is successfully connected to the camera, you can perform the following operations:

- 1. Video preview:** In the real-time preview interface, you can switch to the full-screen preview mode by clicking the full-screen icon or placing the phone horizontally, click the window switch icon to switch video windows, only multi-channel recording can use this feature.
- 2. Video playback:** The video and photo files recorded on the micro SD card can be viewed in the APP, and the video can be played back after clicking the file.
- 3. Video download:** You can select the video or picture you want to download in the micro SD card browsing interface or in the video playback area. After downloading the video, if you play it in the local file of the APP interface, you can view the GPS track of the video.

- 4. Video snapshot:** You can capture the current screen in the real-time preview interface of the APP.
- 5. Mileage statistics:** You can click to download mileage information as required, and the mileage information will be saved in the APP as a picture or PDF file.
- 6. Lens correction line:** Correct the lens balance via accurate crosshair so that the video screen will not be skewed.

3.6 APP Upgrade

Open "Vantrue" APP, click "Me > About > Check Updates", then the APP will automatically detect if the current APP version is the latest version. If there is a new version of the APP, please operate as per the prompts and upgrade the version.

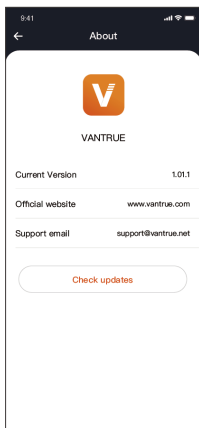


4. Basic Operation

4.1 Menu Settings

The S1 PRO dash cam has 3 function menus, which are: record settings, system settings, and file browsing. You can set your dash cam according to your requirements with these function settings.

Press the  button to pause the video first, then press the  button to enter the menu settings.

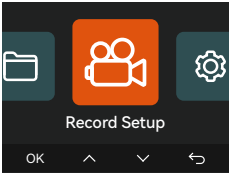

Record Setup:

A. Resolution:

The S1 PRO camera has 3 recording modes:

Recording Mode	Resolution	Default Settings
Front + Rear	1944P+1080P 30FPS	
	1944P+720P 30FPS	
	1440P+1080P 30FPS	√
	1440P+720P 30FPS	
	1440P 60FPS +1080P 30FPS	
	1440P 60FPS+720P 30FPS	
	1080P+1080P 30FPS	
	1080P+720P 30FPS	
	720P+720P 30FPS	

Front + Cabin (S1 PRO DMS)	1944P+1080P 30FPS	
	1944P+720P 30FPS	
	1440P+1080P 30FPS	√
	1440P+720P 30FPS	
	1440P 60FPS +1080P 30FPS	
	1440P 60FPS+720P 30FPS	
	1080P+1080P 30FPS	
	1080P+720P 30FPS	
	720P+720P 30FPS	
Front	2592x1944P 30FPS	
	2560x1440P 30FPS	√
	2560x1440P 60FPS	
	1920x1080P 30FPS	
	1280x720P 30FPS	

B. Loop Recording: The default setting is 1 min. You can choose the options among 1/3/5 min and OFF.

C. G-Sensor: Select the level of G-sensor you need, then you can set 3 directions (Front + Rear/Left + Right /Up + Down). The G-sensor value in each direction can be selected as 1/2/3(default) /4/5/Off. The higher the sensitivity level, the easier it is to trigger event recording. The g-sensor is the most sensitive when set to 5.

D. HDR Timer: The default is off. After turning it on, you can select the automatic start time and close time.

E. Audio Recording: The default is ON. Set recording to on or off.

F. Exposure: The default value is +0.0. Adjust the exposure of the lens.

G. REC Status Light: The default setting is ON. You can choose to turn on/off the recording status light.

H. HDR: The default is ON. Set to on or off .

I. Rotate Display: Default is off. You can choose to flip the rear screen up and down (180 degrees).

J. Mirror: The default is ON. If you turn it on, the rear recording screen will be displayed in mirror mode.

K. Number Plate: Select the number or letter to be set. After setting, your license plate number can be displayed in the recorded video.

L. Stamp: Enable or disable the watermark stamp on video and photos. The watermark stamp includes time and date label, VANTRUE label, license plate number, GPS location information, and speed label. All are enabled by default.

M. Time Lapse: The default value is disabled. You can choose to enable 1FPS/5FPS/10FPS/15FPS.

N. Parking Mode: You can choose the parking mode you need, including Collision Detection/Motion Detection/Low Bitrate Recording/Low Framerate Mode/OFF, the default is OFF.

O. Low-light Night Vision in Parking Mode: Default is ON. When turned on, it can optimize the recording effect of videos in parking mode.

P. Parking Collision Detection: The power saving mode is turned on by default. After turning on the collision detection mode, you can choose power saving mode or fast start mode.

Q. Motion Detection Area: The motion detection range of the front and rear areas can be adjusted respectively.

R. Mileage statistics: The default is on, and the GPS mileage information will be stored in the memory card, you can view it on the computer or export the file through the mileage statistics function in the APP.

S. GPS Settings: GPS is enabled by default. GPS ON/OFF settings, speed unit settings, and GPS information are all set here.

Vantrue Intelligent:

A. Vantrue Intelligent: The default setting is on. You can choose to turn it off according to their needs. If you choose to turn it off, the following functions will not be available.

B. ADAS(Front Camera): It supports Forward Collision Warning, Pedestrian Collision, Lane Departure, Forward Vehicle Departure, and Virtual Bumper. You can choose to turn it on or off, the sensitivity is medium, and the default activation speed is adjustable.

C. BSD(Rear Camera): It supports Lane Change Assist Warning and Rear Collision Warning. You can choose to turn it on or off, the sensitivity is medium, and the default activation speed is adjustable.

D. DMS(Cabin Camera): It supports Smoking Detection, Phone Call Detection, Distraction Detection, Fatigue Detection, Driver Detection, and Steering Wheel position (default left). You can choose to turn it on or off, the sensitivity is medium, and the default activation speed is adjustable.

E. Intelligent View Display: The default is off, you can choose the options among 1 minute/3 minutes/5 minutes, or off.

F. AI Frame Display: The default is on, you turn it on or off according to your needs.

G. Voice Reminder: language reminder sensitivity level, respectively off/1/2/3/4/5/, default 5.

Note: For specific function descriptions, please scan the "Vantrue Intelligence Function Manual" QR code on the card, as shown in the figure below.



System Setup:

A. Language: Available languages are English/Français /Español /Deutsch/ Italiano/简体中文/русский/日本語 /Polski/한국어.

B. Wi-Fi: You can set the WiFi function, switch WiFi mode, and view WiFi information here. The default is automatically turn off WiFi after 10 minutes without connection. WiFi will stay on in the background if you turn on the Auto ON option. The default WiFi mode is 5G. After turning it on, you can connect the WiFi and operate the S1 PRO dash cam through the mobile phone. WiFi Information Displays the WiFi name and password.

C. Voice Control: The default sensitivity is Standard. Voice commands can be recognized after the option is turned on. You can choose options such as low sensitivity/high sensitivity/standard/off.

D. Voice Content: Voice recognition commands. You can use different commands to remote control the camera to work.

E. Format Memory Card: Format all data on the memory card.

F. Format Reminder Setup: you can select the reminder options: 15 Days, 1 Month, and Off. The default is off. When the time is up, you can choose "OK" to format, or choose "Next" to recalculate.

G. Date & Time: There are two ways to set the time and date:

- **Automatic GPS update:** GPS automatic update is enabled by default. The date and time will be automatically updated based on your time zone, please select the correct time zone.
Manual date/time setting. You can choose to turn off automatic GPS update, turn on manual date/time setting, and manually correct the date and time.
- **Sumer/Wintertime automatic switching.** The default is off. After this function is enabled, the system automatically switches between summertime and wintertime.
- * This feature is available in North America only. Time errors may occur in other regions.
The date format and time zone settings can also be set under this menu.

H. Auto LCD Off: Default is off. Set the time to automatically turn off the LCD display after no operation.

I.Screen brightness: The default is automatic mode; In automatic mode, after 10 minutes of unmanned operation of the recorder, the screen brightness decreases by 50%; It can be set to three different levels of brightness: high, medium, and low.

J. Device Sound: Set the volume of the device. The default volume level is 2, the lowest is 0, and the highest is 5.

K. Prompt Tone: According to different situations, the dash cam is set with 5 kinds of prompt tones, which are power-on/off sound, keys sound, file locked sound, format sound, and abnormal stop recording reminder. All prompt tones are turned on by default.

L. Frequency: Different countries have different frequencies. In order to avoid affecting the video, you can choose 50Hz or 60Hz frequency according to different regions.


M. System Info: Check the current model, firmware version, and the Vantrue official website.

N. Certifications: You can view the certification information of the S1 PRO camera.

O. Default Settings: Reset the device back to factory settings.

Files:

Review the video and photo files recorded by the camera.

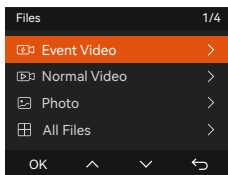

A. Event: Critical event videos detected by G-Sensor activity or manually locked by the user.

The file name format is:

20300128_140633_00008_E_A.MP4

20300128_140633_00008_E_B.MP4

B. Normal: Standard videos recorded. This folder saves loop recording video, parking mode video, time-lapse video.

The file name format of Loop Recording video is:

20300128_140933_00008_N_A.MP4;

The file name format of Parking Mode video is:

20300128_140833_00007_P_A.MP4;

The file name format of Time-Lapse video is:

20300128_140733_00006_T_A.MP4;

C. Photo: Photos files. The file name format is:

20210128_140633_00001_N_A.JPG


D. All: All the standard videos and critical event videos were recorded.

Note: The suffix A represents the files recorded by the front camera, the suffix B represents the files recorded by the rear camera.

4.2 Key Features

4.2.1 Loop Recording

After inserting the memory card and connecting the power, the dash cam will automatically turn on and enter loop recording. The duration of each recorded video will be saved based on the loop recording time you set, and saved in the normal video folder. When the capacity of the normal video folder reaches 70% of the total capacity, the new loop recording file will automatically overwrite the original loop recording files.

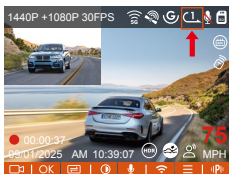


Note:


- The normal operation of the loop recording function is very dependent on the speed of the memory card, so please format the memory card regularly to avoid problems such as excessive memory card files and card aging that affect the normal loop recording.
- Please check the loop recording video regularly to avoid the necessary videos being overwritten by loop.
- When Loop Recording is turned off, the video lock function will no longer work.
- After the loop recording is turned off, the duration of each video will be 20 mins, and the recording will stop when the memory card capacity is full.

4.2.2 Event Recording

Event video is triggered by the G-sensor (Gravity Sensor), which can be automatically triggered or manually locked. During driving, in case of special circumstances, the camera will automatically lock for event recording or you can manually lock it by pressing the  button for event recording. During the lock video period, you can press  the button to capture multiple times. After recording, the video will be automatically saved in the event video folder, and the photo will be saved in the photo folder.

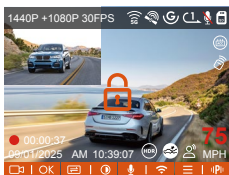

Automatic locking event video is triggered when the car is hit/shaken. The dash cam detects the vibration and automatically locks the current video, which is saved in the event video folder.

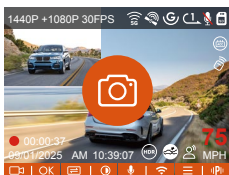


- The sensitivity of the automatic locking video trigger is determined by the sensitivity of the collision. The higher the sensitivity setting, the greater the probability of being triggered.
- The total capacity of the event video file accounts for 30% of the total capacity of the current memory card.

When the event video file reaches the upper limit, the new event video file will automatically overwrite the old event video file. It is recommended to periodically check and save your event video files to avoid loss.

- Lock recording will not trigger in either of the following situations: Loop recording is off or Time lapse recording is on. You can only capture photos with loop recording off/ time lapse on.

4.2.3 Low-light Night Vision in Parking Mode

In order to enhance the safety of parking at night, we make full use of the lens performance combined with low-light night vision technology to improve the night vision effect in parking mode. The default is ON. It will be triggered only after entering the parking mode and will not affect normal recording.

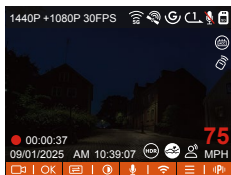



Low-light Night Vision Off



Low-light Night Vision On

4.2.4 Parking Collision Detection

After turning on the parking Collision detection mode, you can select the power saving mode or the quick start mode. In the power saving mode, after entering Collision detection, the dash cam will be turned off, and after the collision is triggered, it will be turned on for recording; In the quick start mode, after entering Collision detection, the dashcam screen will be turned off and the recording will be stopped, and the recording will start immediately after the collision is triggered.

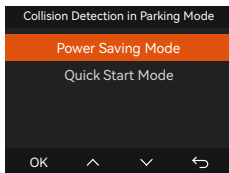
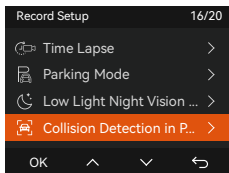


Note:

- The power-saving mode/quick start mode will only take effect after the collision detection is turned on. If the collision detection is turned off or other parking monitoring modes are selected, this function will not take effect.
- Enable power saving mode by default.

4.2.5 Motion Detection Area

The motion detection range of the front and rear areas can be adjusted respectively, and the set range can be adjusted up and down, left and right.

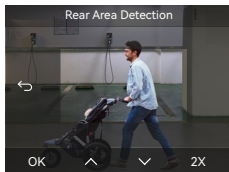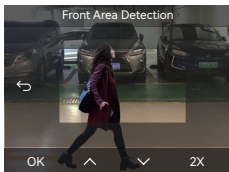


Note:

- This feature only works in motion detection parking mode.
- You can select 1X, 2X, 3X, 4X, or 5X range. The 5X range is the global detection mode.

4.2.6 Parking Mode

Parking Mode operates as a sentry function under different situations. You can switch to different parking monitoring modes according to different parking situations.

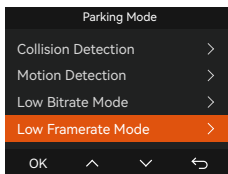

After the parking mode is turned on, there are three ways to record:

- You can wait for 5 minutes to start automatically.
- long press the button  to begin manually.
- Install the Vantrue ACC hardwire kit and the dash cam will directly enter after the car is stopped the engine (the ACC hardwire kit needs to buy separately).


Note:

- To ensure the camera works in park mode, please use the hardwire kits or other stable and continuous power supply to power the dash cam.
- Please use Vantrue hardwire kit for ACC hardwire, ACC hardwire kit from other brands may not work.
- When the temperature in the car is as high as 60°C(140°F), it is recommended that you turn off the camera to avoid the abnormal operation of the camera caused by the high temperature.
- Time-lapse video recording and parking mode (including collision detection, motion detection, low bitrate recording, and low framerate mode) can only be enabled one at a time. When one is enabled, the other will be automatically disabled.


- All videos recorded in parking mode (Collision Detection, Motion Detection, Low Bitrate Recording, Low Framerate mode) will be saved in the normal video folder. In order to prevent the video in parking mode from being overwritten in a loop, please check and save the required files in time to prevent loss.

Collision Detection

When collision detection is enabled, the  icon will be displayed on the recording interface, indicating that the recorder is currently using collision detection mode. Collision detection sensitivity can be adjusted from 1 to 5 levels. You can adjust according to your habits, as well as the surroundings of the car.

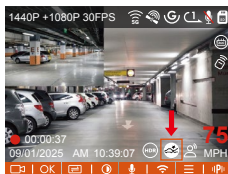

When the Collision Detection is turned on, and no movement is detected after 5 minutes of recording (5-minute entry mechanism for short), then Collision Detection is activated with the  icon in the center of the screen, and the camera automatically turns off. When the dash cam is turned off, it will start to record for 30 seconds after being shaken, then turn off the dash cam again.

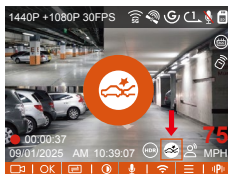


Note:


If the dash cam continues to be hit during the collision detection recording, it will exit the collision detection mode and enter normal recording, restarting the 5-minute entry mechanism.

Motion Detection

When the motion detection is turned on, the  icon will be displayed on the recording interface, indicating that motion detection has been turned on. Please go to “Motion Detection Area” to set the area range.

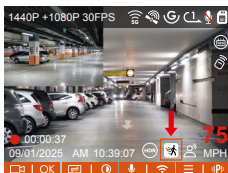

When the motion Detection is turned on, and no movement is detected after 5 minutes of recording, then an orange  icon will appear in the center of the screen, and the screen will turn off after 3 minutes.

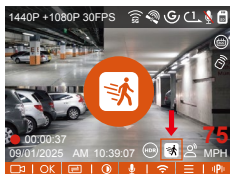



Video recording process: When the camera detects object movement, it will automatically trigger video recording for 30 seconds. After the motion detection recording ends, the camera will load a 15s pre-recorded video into the 30s motion detection video and save the 45s video to the normal folder.

Note:

Motion detection mode can only be engaged when the camera is turned on. Once the camera is turned off, the motion detection mode will not work.



Low Bitrate Recording

When Low Bitrate recording is enabled, the  or  icon will be displayed on the recording interface, depending on whether you choose 1080P 15FPS or 720P 15FPS.

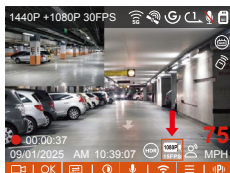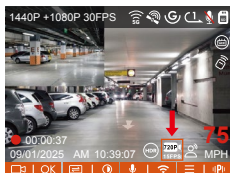

If no movement is detected after 5 minutes of recording, there will be a  or  icon that appears in the center of the screen. The resolution of all current video will be automatically switched to 1080P 15FPS or 720P 15FPS


for recording, and the recording duration will be determined according to the currently set loop recording duration. When the camera vibrates or is moved, it will automatically exit, wait 5 minutes, and enter again.

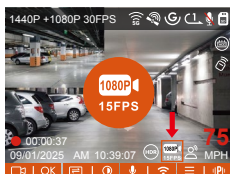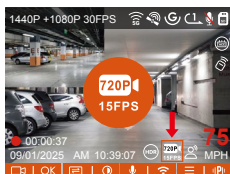

Note: Low Bitrate recording can only be engaged when the camera is turned on. Once the camera is turned off, the Low Bitrate recording will not work.

Low Framerate mode

When the low framerate mode is selected, the camera will record according to your selection among 1FPS/5FPS/10FPS/15FPS. For example, if you select 1FPS and the current video resolution frame rate is 30FPS, the camera will generate a 30FPS video per second. Low framerate mode can greatly preserve the integrity of the video and save space on the memory card.

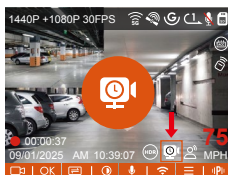


[Normal Recording Time = Low Framerate Recording Time (Sec) x Recording Frame Rate FPS/Low Framerate Option] (Time should be converted into seconds)

Note:

- The time unit of the calculation formula is seconds, so the final normal recording time calculated is also in seconds. If you need to convert it into other time units, please check the units and convert them yourself.
- The low framerate mode is the same as the time-lapse recording mode, the former only works when parking, and the latter continues to work after it is turned on.
- In low framerate mode, the camera also needs a stable power supply. Once the power is off or exhausted, the camera will shut down.


4.2.7 Mileage Statistics

The S1 PRO dash cam can record, analysis and statistics your driving time, driving distance, altitude, driving speed, and other information according to the GPS information. You can click to download mileage information in the APP, and the mileage information will be saved in the APP as a picture or PDF file.

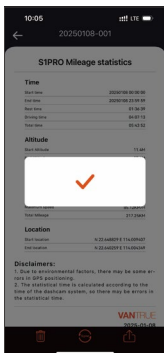

4.2.8 Voice Assistant


You can also control the camera with voice commands, such as take photo, video start, turn on/off WiFi, lock the video, etc. Currently supported languages are English, Français, Japanese, Russian, and Chinese. For more detailed voice commands, please check System Settings > Voice Content.

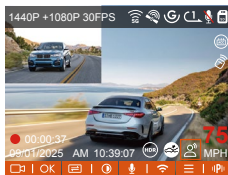

The default setting is standard sensitivity. Voice recognition has options such as low sensitivity/standard /high sensitivity/off.

4.2.9 GPS Function

The GPS function is one of the important functions of the dash cam. GPS is enabled by default, and the camera receives GPS signals through the GPS mount. It can automatically calibrate the time and date in your area, recording the location where the video was taken and the speed of the car at the time.

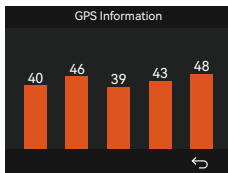


Note:

- The GPS connection will be completed within 1 minute after you turn on the device. If the GPS connection is not successful within 1 minute, please check whether the device has turned on the GPS function, whether the GPS bracket is properly connected, and whether your environment (underground parking lot, densely populated residential area, subway, tunnel, etc.) is affecting the reception of GPS signal.
- GPS information is recorded along with the video. To view it, please download and install the Vantrue APP and Vantrue Player (available for download at <https://www.vantrue.com/pages/vantrue-app-player>).

4.2.10 GPS Automatic Update Time& Date

The GPS automatic correction time setting for the S1 PRO dash cam is turned on by default. You can select GMT-08:00 by selecting your time zone, such as Los Angeles. If you do not know the time zone of your location, you can use WiFi to connect to the Vantrue App and confirm that the automatic time adjustment function in the APP is turned on.

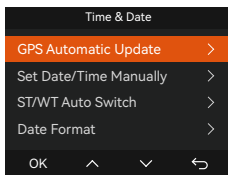

Note:



- GPS automatic time correction needs to set the correct time zone, you can refer to the representative cities after each time zone.
- Automatic switching between winter and summer time, this function is only available in North America.

4.2.11 Viewing and Deleting Video/Photos

a. Viewing and Deleting files on the Camera



-Playback Files

After clicking "Files", enter any folder, and after opening the video folder, you can press ▼ the button to select the next file, and delete the file during playback.

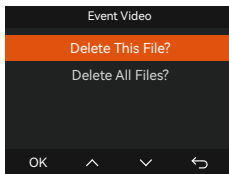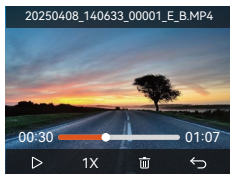


-Deleting Files

Go to "Files", choose a video on the dash cam, and press ⚠ the button in the file browsing interface to pop up the delete Menu.

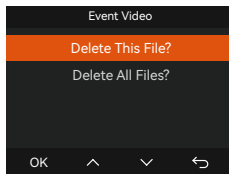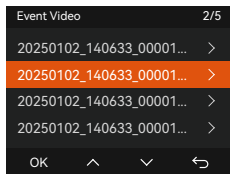


b. Viewing and Deleting files on Computer

1. Connect the included TYPE-C USB data cable to the camera and the computer.

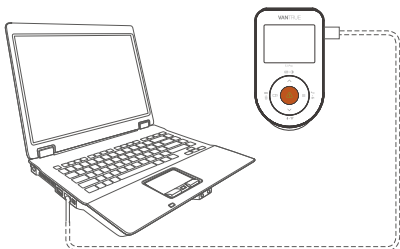

2. After the connection is successful, the  icon will appear on the display of the camera to transfer data, and then you can view and delete the video files in the computer folder.

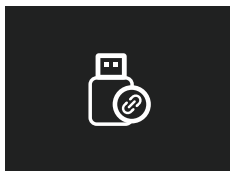


3. Depending on the computer systems of different users, after the camera is connected to the computer, it will be displayed as a removable drive or a removable folder.
4. To view the files on the computer, you can directly access them, right-click to open the menu, and delete them.
5. You can also use a USB card reader to read the memory card information.
6. To ensure a stable power supply, please check whether the computer interface is a USB 3.0 interface.

When connecting to a desktop computer, it is recommended to use the USB port on the back of the host computer.

c. Viewing and Deleting on the “Vantrue” APP.

After the camera is successfully connected to the mobile phone through WiFi, it can play back, download and delete files in the mobile APP.

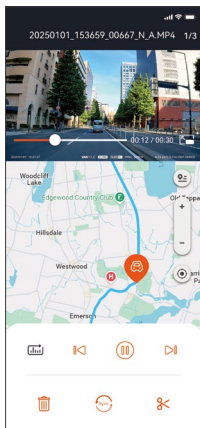



Note:




- For video playback in the APP or downloads to micro SD card, there will be no network traffic consumption.
- You can view GPS track information only after the video file is downloaded and played back locally. At the same time, you need to disconnect the WIFI of the dash cam, otherwise, the map information will be blank.

4.2.12 Upgrading Firmware

Upgrade Method: OTA Upgrade

After opening the APP, you will receive the firmware update push. Once confirming the upgrade, it will jump to the OTA upgrade interface, which can be upgraded according to the APP guidance. Please note: OTA requires network traffic to download upgrade files.

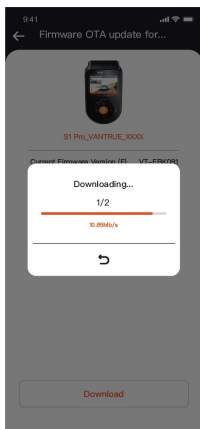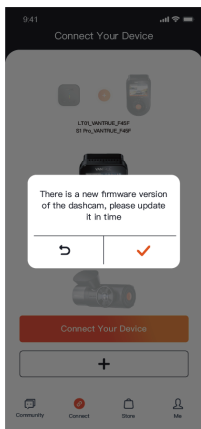

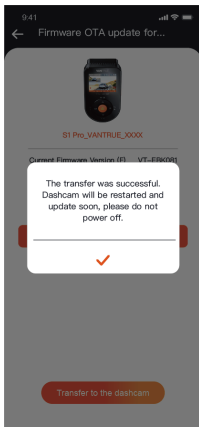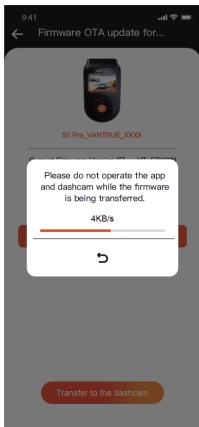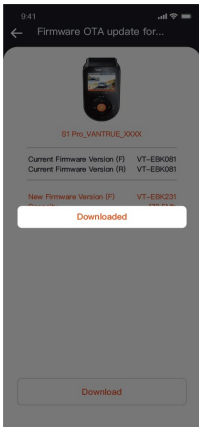

5. Specifications

The specifications of this product may change without prior notice due to product improvements.

Model	S1 Pro
Chips	Novatek high-performance processor
Image Sensor	Sony Sensor
G-sensor	Built-in triaxial sensor
WiFi	Built-in 2.4GHz&5GHz
Screen	2'' IPS Screen
Camera Angle	Front: 160° wide viewing angle; Rear: 165° wide viewing angle;
Aperture	Front: F/1.8 wide aperture; Rear: F/1.8 wide aperture;
Languages	English/Français/Español/Deutsch/ Italiano/简体中文/русский/ 日本語/ Polski/한국어/язык
Highest Video Resolution	Front + Rear: 1944P+1080P 30FPS Front + Cabin: 1944P+1080P 30FPS Front: 2592x1944P 30FPS
Video File Format	MP4
Image Format	JPEG
Audio	Built-in microphone and speaker
Memory Storage	External: 32GB-1TB Micro SD Card, U3, Class 10(not included in the package)
USB Port	Type C
Power Source	Built-in super capacitor
Supply voltage current	DC 5V 2.4A
Power	6W

Working Temperature	-4°F to 140°F(-20°C to 60°C)
---------------------	------------------------------

Storage Temperature	-4°F to 158°F(-20°C to 70°C)
---------------------	------------------------------

6. Warning

- This product is an auxiliary device for the purpose of recording exterior images of vehicles, and some functions may not be supported due to different driving and vehicle environments.
- Firmware upgrade will be carried out from time to time to further improve the product, please pay attention to the official notice of VANTRUE according to the specific upgrade.
- This product can record and save images of vehicle accidents, but it does not guarantee that all accident images can be recorded. The image may not be recorded in a special folder because the crash sensor cannot be activated for minor crashes.
- Be sure to turn off the power when inserting or removing the memory card.
- For stable use of the product, please format the memory card at least once a month.
- Generally, memory cards have a life span, and long-term use of memory cards may result in data not being saved. In this case, it is recommended to purchase a new memory card for use. If the data is destroyed due to the long-term use of the memory card, the company will not be held responsible.
- Do not install or operate this product while the vehicle is running.
- Do not subject the product to strong shocks or vibrations, which may damage the product and cause malfunction or inoperability.
- Do not use chemical solvents or cleaning agents to clean the product.

- The ambient temperature range for normal use of this device is -20 degrees Celsius to 60 degrees Celsius. Exceeding this ambient temperature range may cause the product to malfunction.
- Do not place the product in an open flame. Do not use the product in high temperature and high humidity areas, as this may cause electric shock, short circuit, and other hazards and damage the product.
- It is forbidden to disassemble or modify the car charger by yourself, or use a short-circuit car charger, otherwise it will cause personal injury, electric shock, fire and other dangers or damage the product.
- Please do not disassemble or modify the product without permission to avoid damaging the recorder, generating heat and causing fire.
- Please use this product within the scope of the law.

7. Warranty & Support

Warranty

The VANTRUE® S1 PRO Dash Cam comes with a full 12 months warranty. If you register your product on our official site (<https://www.vantrue.com>), you can extend the warranty to 18 months.

Support

If you have any questions regarding your product, please solve it in the following ways: 1. Open Vantrue APP, find the solutions in the frequently asked questions; 2. Contact customer service of your purchased channel; 3. Drop us an email at **support@vantrue.net**. Queries are typically answered within 12-24 hours.

Your opinion matters

VANTRUE® is firmly committed to always improving our products, services, and user experience. If you have any thoughts on how we can do even better, we welcome your constructive feedback and suggestions.

If you need the full version of user manual, please download on our official site, or connect with us today at **support@vantrue.net**.

Thank You for choosing Vantrue

VANTRUE
truly driven.



FCC ID: 2A7EH-S1PRO



219-239289



IC: 28650-S1PROV CAN ICES-003(B)/NMB-003(B)

www.vantrue.com

Made in China